


# SureSine Meter Map

## Meter Menu

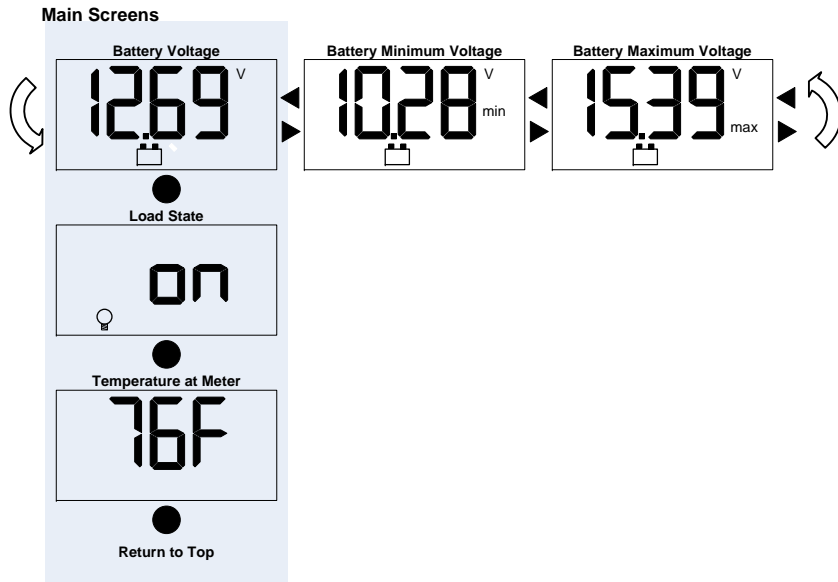

## Special Functions




= **Meter Settings**  
(see manual)



= **Reset to Zero:**  
Battery Maximum Voltage  
Battery Minimum Voltage

## Self Diagnostics

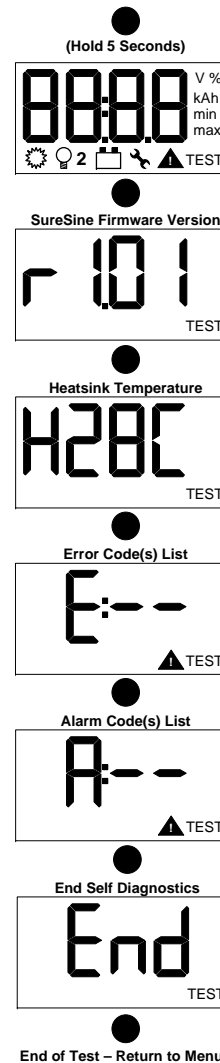

### Error Codes List

- E:-- = No errors
- E:01 = Inverter Reset
- E:02 = Overcurrent
- E:04 = Software Error
- E:05 = High Voltage Disconnect
- E:06 = High Temp. Disconnect
- E:07 = Settings (DIP) switch changed
- E:08 = EEPROM Update Error

### Alarm Codes List

- A:-- = No alarms
- A:01 = Heatsink Temp. Sensor Open
- A:02 = Heatsink Temp. Sensor Shorted
- A:04 = High Temperature Warning